






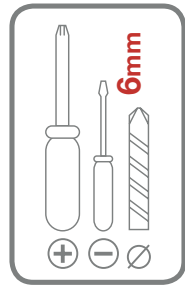


L430S






- DE Contents
- FR Inhalt
- GB Contenu
- NL Inhoud
- FI Sisältö
- DK Indhold
- IT Contenuto
- ES Contenido
- TR İçerik
- PT Conteúdo
- SE Innehåll

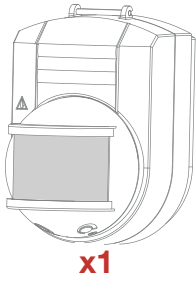



- DE Component locations
- FR Montage
- GB Emplacement des composants
- NL Componentlocaties
- FI Asemuspaikan valinta
- DK Komponentplacering
- IT Posizionamento del dispositivo
- ES Ubicaciones de los componentes
- TR Pozisyonlandırma
- PT Locações dos componentes
- SE Komponentens placering

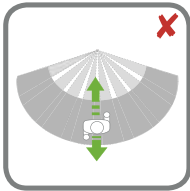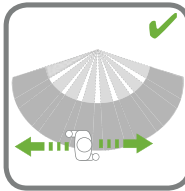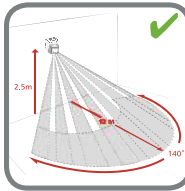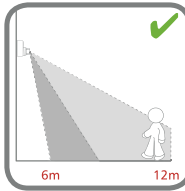

- DE Battery install
- FR Installer la batterie
- GB Installation des piles
- NL Batterij installeren
- FI Pariston asennus
- DK Isejning af batteri
- IT Installazione batteria
- ES Instalación de la batería
- TR Batarya kurulumu
- PT Instalação da bateria
- SE Batteriinstallation

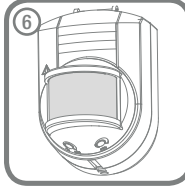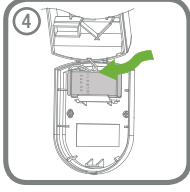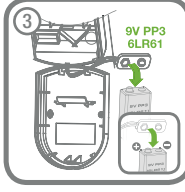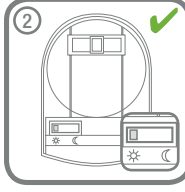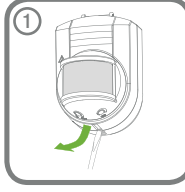

- DE Linking
- FR Einlernen
- GB Liaison
- NL Koppelen
- FI Linkitys
- DK Tilslutning
- IT Collegamento
- ES Enlace
- TR Bağlantı
- PT Ligação
- SE Länkning

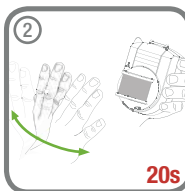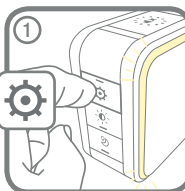

- DE Installation
- FR Installation
- GB Installation
- NL Installatie
- FI Asemus
- DK Installation
- IT Installazione
- ES Instalación
- TR Kurulum
- PT Instalação
- SE Installation

